

## **BBQ Instruction Sheet**

When connecting the regulator to the propane tank, be sure the pressure relief valve (usually located opposite the connection to the regulator) is directed away from the front of the grill. If the relief valve should open, the propane will be directed to an area that will do the least harm.

Ensure that all hoses, fittings and the regulator are properly protected from heat and accidental damage. Hoses can be burned or chaffed if routed improperly. Be sure that all burner control valves on the grill are turned off (in the horizontal position).

Thread the connector attached to the inlet side of the regulator into the service valve on the propane tank. Remember that since the connection has a left-handed thread, you must turn it counter clockwise to tighten. Tighten the connection securely by hand.

## LIGHTING THE CONFETTI CLUB GRILL

- Make sure that all of the burner knobs are in the OFF position.
  Off means that they are horizontal ←→.
- 2. Slowly turn the valve on the propane tank counterclockwise to open.
- 3. Light your barbeque lighter or long fireplace match and place the lit end of the lighter between the bars on the cooking grate close to the burner knob farthest away from the propane tank (last burner to the right).
- 4. Turn on that far right burner by rotating the knob to the vertical or straight up position. The burner should light immediately.
- 5. If the burner does not light, turn off the valve on the propane tank and step back for a few minutes. When gas smell disappears, begin the lighting procedure again.
- 6. Once the first (far right) burner is lit, the rest will light by turning on the knobs. Adjust the flame heights and begin grilling.

## TURNING OFF THE CONFETTI CLUB GRILL

- 1. First turn off the valve on the propane tank.
- 2. When the last flame goes out, turn all the burner knobs to the off position.
- 3. With a cloth or brush, wipe off excess material on the grate.
- 4. Allow the grill to cool before removing the unit.
- 5. If removing the tank, undo the connection by turning clockwise since the connection has a left-handed thread.